

USB Host Stack

USB Host Base System

In this table, click *Online* to view the current online manual or click *PDF* to view or download the PDF of the current manual. For each package, these describe the software version shown in the table.

For PDFs describing earlier software versions, see [USB Host PDFs](#).

S/w version	User Guide version	Online	PDF
3.16 R2 - 3.17	HCC USB Host Base System User Guide v1.80	Online	PDF

USB Host Class Drivers

In this table, click *Online* to view the current online manual or click *PDF* to view or download the PDF of the current manual. For each package, these describe the software version shown in the table.

For PDFs describing earlier software versions, see [USB Host PDFs](#).

S/w version	User Guide version	Online	PDF
3.11	HCC Embedded USB Host Audio Class Driver User Guide v1.00	Online	PDF
1.01 - 1.03	HCC Embedded USB Host CCID Class Driver User Guide v1.10	Online	PDF
2.11 - 2.13	HCC Embedded USB Host CDC-ACM Class Driver User Guide v2.50	Online	PDF
2.08	HCC Embedded USB Host CDC-ECM Class Driver User Guide v1.30	Online	PDF
2.01	HCC Embedded USB Host CDC-EEM Class Driver User Guide v1.00	Pending	
1.07	HCC Embedded USB Host CDC-NCM Class Driver User Guide v1.00	Pending	
1.02	HCC Embedded USB Host CP210x Class Driver User Guide v1.40	Online	PDF
3.11 - 3.13	HCC Embedded USB Host FTDI Class Driver User Guide v1.60	Online	PDF
5.04	HCC Embedded USB Host HID Class Driver User Guide v2.50	Online	PDF
2.08	HCC Embedded USB Host Hub Class Driver User Guide v1.50	Online	PDF
3.12 - 3.14	HCC Embedded USB Host Mass Storage Class Driver User Guide v2.60	Online	PDF
1.03	HCC Embedded USB Host Microchip LAN7500 and LAN9500 Class Driver User Guide v1.30	Online	PDF
2.04	HCC Embedded USB Host MIDI Class Driver User Guide v1.20	Online	PDF
2.07	HCC Embedded USB Host Printer Class Driver User Guide v1.00	Online	PDF
1.01	HCC Embedded USB Host Fujitsu FTP-6xx Printer Class Driver User Guide v1.00	Online	PDF
4.02	HCC Embedded USB Host Raw Class Driver User Guide v1.50	Online	PDF
3.02	HCC Embedded USB Host RNDIS Class Driver User Guide v1.00	Pending	

USB Host Controllers

Many USB controllers are used across different microcontroller families. If it is not clear from your microcontroller manual which USB IP is used, or if your microcontroller does not appear to be supported, please contact support@hcc-embedded.com.

In this table, click *Online* to view the current online manual or click *PDF* to view or download the PDF of the current manual. For each package, these describe the software version shown in the table.

For PDFs describing earlier software versions, see [USB Host PDFs](#).

S/w version	User Guide version	Online	PDF
2.10 - 2.12	HCC USB Atmel Host Controller User Guide v1.20	Online	PDF
1.01	HCC USB Atmel USBC Host Controller User Guide v1.00	Online	PDF
3.12 - 3.16	HCC USB EHCI Host Controller User Guide v1.50	Online	PDF
2.01	HCC USB ISP1161 Host Controller User Guide v1.20	Online	PDF
1.02	HCC USB ISP1362 Host Controller User Guide v1.20	Online	PDF
2.03	HCC USB LM3S and TM4C Host Controller User Guide v1.20	Online	PDF
1.08	HCC USB MAX3421 Host Controller User Guide v1.40	Online	PDF
1.04	HCC USB MUSB CPPI Host Controller User Guide v1.40	Online	PDF
1.07	HCC USB MUSB DMA Host Controller User Guide v1.30	Online	PDF
2.14 - 2.18	HCC USB OHCI Host Controller User Guide v1.40	Online	PDF
2.21	HCC USB Renesas Host Controller User Guide v1.40	Online	PDF
2.11	HCC USB SAF1761 Host Controller User Guide v1.30	Online	PDF
2.31	HCC USB STM32 OTG Host Controller User Guide v1.00	Pending	
3.16	HCC USB Synopsys OTG Host Controller User Guide v1.60	Online	PDF
1.02	HCC USB Template Host Controller User Guide v1.00	Pending	
1.08 - 1.10	HCC USB VUSB Host Controller User Guide v1.50	Online	PDF