

File Systems

FAT-based File Systems

In this table, click *Online* to view the current online manual or click *PDF* to view or download the PDF of the current manual. For each package, these describe the software version shown in the table.

For PDFs describing earlier software versions, see [File System PDFs](#).

S/w version	User Guide version	Online	PDF
8.46 - 8.48	HCC FAT and SafeFAT File System User Guide v5.10	Online	PDF
2.17 - 2.21	HCC FAT File System Test Suite User Guide v1.40	Online	PDF
1.08	HCC Linux FUSE Interface to FAT User Guide	Pending	
1.15	HCC exFAT and SafeexFAT File System User Guide v1.50	Online	PDF
1.03	HCC Linux FUSE Interface to exFAT User Guide v1.40	Online	PDF
1.12	HCC exFAT and SafeexFAT Test Suite User Guide v1.20	Online	PDF
1.01	HCC FAT Index User Guide v1.00	Pending	
5.05	HCC SuperTHIN File System User Guide v2.10	Online	PDF
5.05	HCC THIN File System User Guide v4.30	Online	PDF

Flash File Systems

In this table, click [Online](#) to view the current online manual or click [PDF](#) to view or download the PDF of the current manual. For each package, these describe the software version shown in the table.

For PDFs describing earlier software versions, see [File System PDFs](#).

S/w version	User Guide version	Online	PDF
3.01	HCC FileSystem Memory Calculator User Guide v1.20	Online	PDF
5.05 - 5.07	HCC SafeFLASH File System User Guide v4.40	Online	PDF
2.03 - 2.04	HCC SafeFLASH File System NAND Drive User Guide v1.60	Online	PDF
2.03 - 2.07	HCC SafeFLASH File System NOR Drive User Guide v1.80	Online	PDF
2.02 - 2.03	HCC SafeFLASH File System RAM Drive User Guide v1.50	Online	PDF
2.05 - 2.06	HCC SafeFLASH for Adesto DataFlash Drives User Guide v1.30	Online	PDF
1.01	HCC SafeFLASH NAND Driver for Hynix HY27UF08 User Guide v1.00	Online	PDF
1.05	HCC SafeFLASH NAND Driver for Micron MT29F2G16 User Guide v1.40	Online	PDF
1.03	HCC SafeFLASH NAND Driver for Micron MT29F0G01 SPI User Guide v1.40	Online	PDF
1.01	HCC SafeFLASH NAND Driver for Micron MT29F0G08 with ECC User Guide v1.00	Online	PDF
1.01	HCC SafeFLASH NAND Driver for Samsung K9F1G08 User Guide v1.40	Online	PDF
1.01	HCC SafeFLASH NAND Driver for Samsung K9F1G08 with FMC User Guide v1.00		Pending
1.05	HCC SafeFLASH NAND Driver for Spansion® S34ML01Gx00 User Guide v1.00	Online	PDF
1.01	HCC SafeFLASH NOR Driver for Cadence Quad SPI User Guide v1.00		Pending
1.09	HCC SafeFLASH NOR Driver for CFI and SFDP SPI Flash User Guide v1.30	Online	PDF
1.01	HCC SafeFLASH NOR Driver for Cypress® S29GL128 User Guide v1.00		Pending
1.02	HCC SafeFLASH NOR Driver for Macronix MX29GL128F User Guide v1.40	Online	PDF
1.01	HCC SafeFLASH NOR Driver for Micron M29W128G User Guide v1.30	Online	PDF
1.01	HCC SafeFLASH NOR Driver for SPIFI User Guide v1.10	Online	PDF
2.02	HCC SafeFLASH NOR Driver for Encrypted SPIFI User Guide v1.00		Pending
1.03	HCC SafeFLASH NOR Driver for STM32 User Guide v1.00		Pending
1.00	HCC SafeFLASH Sample NAND Drivers User Guide v1.00		Pending
1.00	HCC SafeFLASH Sample NOR Drivers User Guide v1.00		Pending
1.00	HCC Safe Imager User Guide v1.00		Pending
3.10 R2 - 3.11	HCC TINY File System User Guide v3.00	Online	PDF
2.01	HCC TINY BW (Byte-Writable) File System User Guide v1.00		Pending

Other File Systems

In this table, click [Online](#) to view the current online manual or click [PDF](#) to view or download the PDF of the current manual. For each package, these describe the software version shown in the table.

For PDFs describing earlier software versions, see [File System PDFs](#).

S/w version	User Guide version	Online	PDF
3.03	HCC File System Common API User Guide v2.20	Online	PDF
1.18	HCC Smart-Meter File System User Guide v1.30	Online	PDF