

# USB Device Low Level Driver for OMAP L-1x User Guide

Version 1.10

For use with USB Device Low Level Driver for OMAP™ L-1x  
versions 1.05 and above

**Date:** 16-Jun-2017 17:16

All rights reserved. This document and the associated software are the sole property of HCC Embedded. Reproduction or duplication by any means of any portion of this document without the prior written consent of HCC Embedded is expressly forbidden.

HCC Embedded reserves the right to make changes to this document and to the related software at any time and without notice. The information in this document has been carefully checked for its accuracy; however, HCC Embedded makes no warranty relating to the correctness of this document.

# Table of Contents

---

System Overview	3
Introduction	3
Feature Check	4
Packages and Documents	5
Packages	5
Documents	5
Change History	6
Source File List	7
Configuration File	7
Source Code Files	7
Platform Support Package (PSP) File	7
Version File	7
Configuration Options	8
Integration	9
OS Abstraction Layer	9
PSP Porting	9


# 1 System Overview

## 1.1 Introduction

This guide is for those who want to configure and use the HCC Embedded OMAP™ L-1x Low Level Driver module with HCC's USB device stack. This module provides a USB device driver for OMAP™ L-1x controllers from Texas Instruments Incorporated.

The driver can handle all USB transfer types and, in conjunction with the USB device stack, can be used with any USB device class driver.

This package provides a low level driver for a USB stack, as shown below.

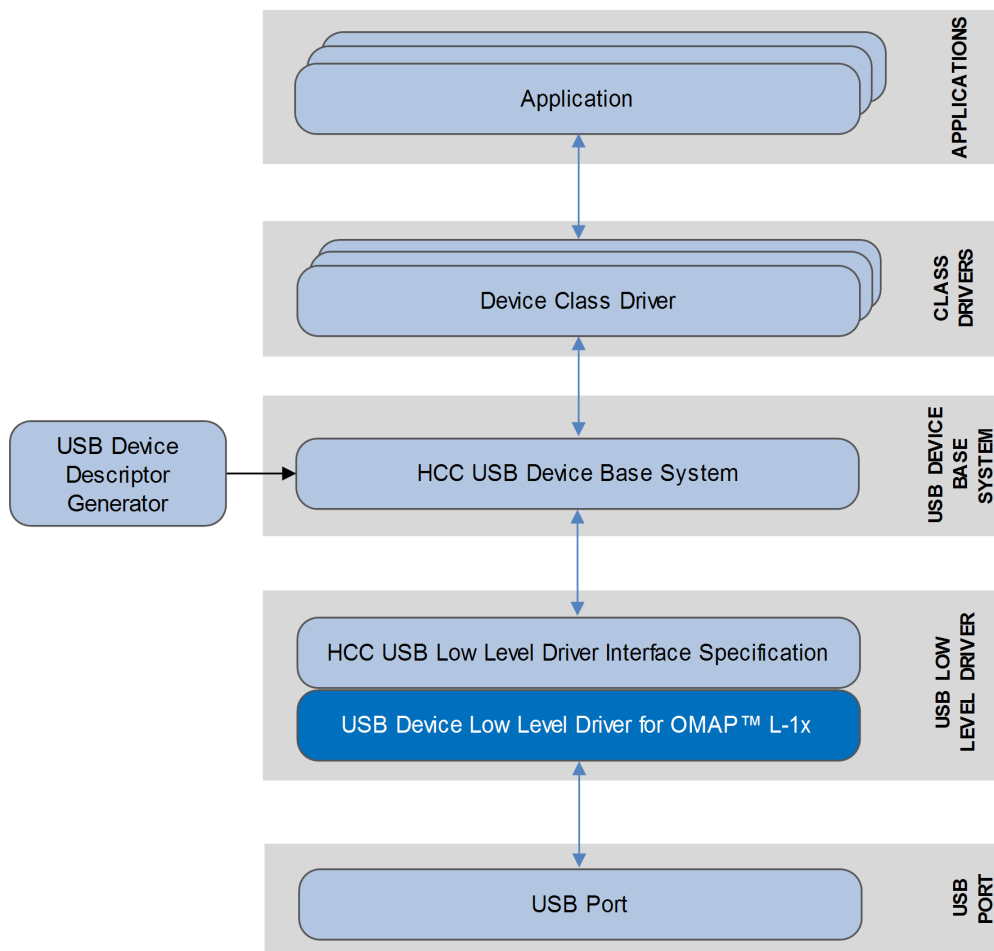

The low level driver is always started automatically by the USB device stack. The driver is linked to the stack at compile time because each low level driver uses the same function names. This also means that only one driver can run in a system.

## 1.2 Feature Check

---

The main features of the low level driver are the following:

- Conforms to the HCC Advanced Embedded Framework.
- Designed for integration with both RTOS and non-RTOS based systems.
- Conforms to HCC's USB Device Low Level Driver Specification.
- Integrated with the HCC USB device stack and all its class drivers.
- Supports all USB transfer types: control, bulk, interrupt, and isochronous.

## 1.3 Packages and Documents

---

### Packages

The table below lists the packages that you need in order to use this module:

Package	Description
<code>hcc_base_doc</code>	This contains the two guides that will help you get started.
<code>usbd_base</code>	The USB device base package. Its source code includes the USB Driver device core.
<code>usbd_drv_omap</code>	The OMAP™ L-1x low level driver package described by this document.

### Documents

For an overview of HCC's embedded USB stacks, see [Product Information](#) on the main HCC website.

Readers should note the points in the [HCC Documentation Guidelines](#) on the HCC documentation website.

#### HCC Firmware Quick Start Guide

This document describes how to install packages provided by HCC in the target development environment. Also follow the *Quick Start Guide* when HCC provides package updates.

#### HCC Source Tree Guide

This document describes the HCC source tree. It gives an overview of the system to make clear the logic behind its organization.

#### HCC Embedded USB Device Base System User Guide

This document defines the USB device base system upon which the complete USB stack is built.

#### USB Device Low Level Driver for OMAP L-1x User Guide

This is this document.

## 1.4 Change History

---

This section describes past changes to this manual.

- To view or download earlier manuals, see [Archive: USB Device Low Level Driver for OMAP L-1x User Guide](#).
- For the history of changes made to the package code itself, see [History: usbd\\_drv\\_omap](#).

The current version of this manual is 1.10. The full list of versions is as follows:

Manual version	Date	Software version	Reason for change
1.10	2017-06-16	1.05	New <i>Change History</i> format.
1.00	2015-03-06	1.05	First release.

## 2 Source File List

This section describes all the source code files included in the system. These files follow the HCC Embedded standard source tree system, described in the [HCC Source Tree Guide](#). All references to file pathnames refer to locations within this standard source tree, not within the package you initially receive.

**Note:** Do not modify any of these files except the configuration file and PSP file.

### 2.1 Configuration File

The file `src/config/config_usbdev_omap1x.h` contains all the configurable parameters. Configure these as required. For details of these options, see [Configuration Options](#).

### 2.2 Source Code Files

These files in the directory `src/usb-device/usb-drivers` are the source code files. **These files should only be modified by HCC.**

File	Description
<code>usbdev_dev.h</code>	USB driver-specific header file.
<code>usbdev_omap1x.c</code>	Source code.

### 2.3 Platform Support Package (PSP) File

The file `src/psp/target/include/omap1x_regs.h` provides register elements the core code needs to use, depending on the hardware. Modify the file as required for your hardware.

### 2.4 Version File

The file `src/version/ver_usbdev_omap1x.h` contains the version number of this module. This version number is checked by all modules that use this module to ensure system consistency over upgrades.

## 3 Configuration Options

Set the system configuration options in the file **src/config/config\_usbdomapl1x.h**. This section lists the available configuration options and their default values.

### **USBDSR\_ID**

The Interrupt ID. The default is CYGNUM\_HAL\_INTERRUPT\_USB0.

### **USBDSR\_PRIORITY**

The ISR priority. The default is 7.

### **USBDSR\_USE\_HIGH\_SPEED**

Keep the default of 1 to use high speed if possible. Set this to 0 to use full speed only.



## 4 Integration

This section specifies the elements of this package that need porting, depending on the target environment.

### 4.1 OS Abstraction Layer

All HCC modules use the OS Abstraction Layer (OAL) that allows the module to run seamlessly with a wide variety of RTOSes, or without an RTOS.

This module requires the following OAL elements:

OAL Resource	Number Required
Tasks	0
Mutexes	1
Events	1
ISRs	1

### 4.2 PSP Porting

The Platform Support Package (PSP) is designed to hold all platform-specific functionality, either because it relies on specific features of a target system, or because this provides the most efficient or flexible solution for the developer. For full details of its functions, see the *HCC Base Platform Support Package User Guide*.

The module makes use of the following standard PSP function:

Function	Package	Element	Description
<code>psp_memset()</code>	psp_base	psp_string	Sets the specified area of memory to the defined value.