

DHCP Client for IPv4 User Guide

Version 1.30

For use with Dynamic Host Control Protocol (DHCP)
Client for IPv4 versions 2.19 and above

Date: 20-Jun-2017 12:14

All rights reserved. This document and the associated software are the sole property of HCC Embedded. Reproduction or duplication by any means of any portion of this document without the prior written consent of HCC Embedded is expressly forbidden.

HCC Embedded reserves the right to make changes to this document and to the related software at any time and without notice. The information in this document has been carefully checked for its accuracy; however, HCC Embedded makes no warranty relating to the correctness of this document.

Table of Contents


System Overview	3
Introduction	3
Feature Check	4
Packages and Documents	5
Packages	5
Documents	5
Change History	6
Source File List	7
Configuration File	7
DHCP Client System	7
Version File	7
Configuration Options	8
Integration	9
OS Abstraction Layer	9
Utilities	9
PSP Porting	10

1 System Overview

1.1 Introduction

This guide is for those who want to implement a Dynamic Host Control Protocol (DHCP) client module as part of their TCP/IP stack. The DHCP Client for IPv4 module is used by a client (a computer or other device) to get an IP address automatically from a remote DHCP server. This client module supports IPv4 addresses. It can be used alone in an IPv4 system or in the HCC dual TCP/IP stack alongside the DHCP client for IPv6.

The DHCP Client for IPv4 module is part of the HCC MISRA-compliant TCP/IP stack, as shown below, and is designed specifically for use with it. (In this diagram green lines show interfaces available to users of the stack, red lines show interfaces internal to the TCP/IP system.)

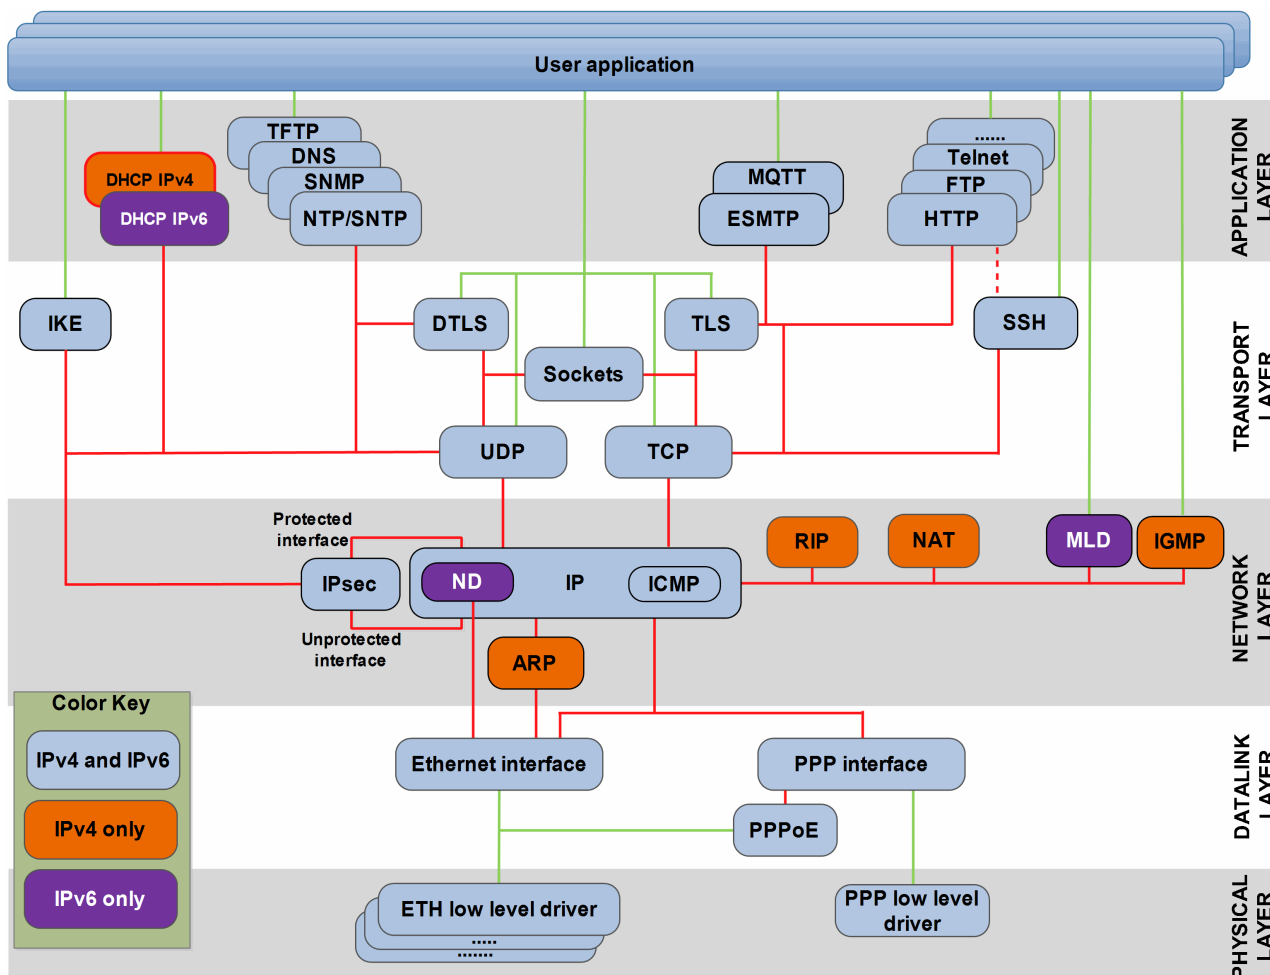

When a DHCP-configured client connects to a network, it sends a broadcast query to a DHCP server, requesting necessary information. If the request is valid, the server assigns the device an IP address, a lease (the length of time the allocation is valid), and other IP configuration parameters, such as the subnet mask and the default gateway.

The query is typically sent straight after booting and must complete before the client can initiate IP-based communication with other hosts. Upon disconnection, the IP address is returned to the pool for use by another computer. In this way many computers may use the same IP address in a short time.

1.2 Feature Check

The main features of the system are the following:

- Conforms to the HCC Advanced Embedded Framework.
- Compliant with the HCC MISRA-compliant TCP/IP stack.
- Supports IPv4 addresses.
- Designed for integration with both RTOS and non-RTOS based systems.
- Compliant with [RFC 2131](#).
- Has optional support for Fully Qualified Domain Names (FQDNs).

1.3 Packages and Documents

Packages

The table below lists the packages that you need in order to use this module:

Package	Description
<code>hcc_base_doc</code>	This contains the two guides that will help you get started.
<code>ip_app_dhcp_v4</code>	The DHCP client for IPv4 package described in this manual.
<code>ip_base_v4</code>	The TCP/IP IPv4 base package.
<code>mip_udp</code>	The UDP package.

Documents

For an overview of the HCC TCP/IP stack software, see [Product Information](#) on the main HCC website.

Readers should note the points in the [HCC Documentation Guidelines](#) on the HCC documentation website.

HCC Firmware Quick Start Guide

This document describes how to install packages provided by HCC in the target development environment. Also follow the *Quick Start Guide* when HCC provides package updates.

HCC Source Tree Guide

This document describes the HCC source tree. It gives an overview of the system to make clear the logic behind its organization.

HCC TCP/IP Dual Stack System User Guide

This is the core document that describes the complete TCP/IP stack. It covers both IPv4 and IPv6 systems.

HCC DHCP Client for IPv4 User Guide

This is this document.

HCC DHCP Client for IPv6 User Guide

This document describes the similar DHCP client that supports IPv6 addresses.

1.4 Change History

This section describes past changes to this manual.

- To download earlier manuals, see [Archive: DHCP Client for IPv4 User Guide](#).
- For the history of changes made to the package code itself, see [History: ip_app_dhcp_v4](#).

The current version of this manual is 1.30. The full list of versions is as follows:

Manual version	Date	Software version	Reason for change
1.30	2017-06-20	2.19	New <i>Change History</i> format.
1.20	2017-03-28	2.18	Updated network diagram.
1.10	2017-01-18	2.18	Updated network diagram.
1.00	2016-04-05	2.16	First online version.

2 Source File List

The following sections describe all the source code files included in the system. These files follow the HCC Embedded standard source tree system, described in the [HCC Source Tree Guide](#). All references to file pathnames refer to locations within this standard source tree, not within the package you initially receive.

Note: Do not modify any files except the configuration file.

2.1 Configuration File

The file `src/config/config_ip_app_dhcp.h` contains all the configurable parameters of the system. Configure these as required. For details of these options, see [Configuration Options](#).

2.2 DHCP Client System

These files are in the directory `src/ip/apps/dhcp`. **These files should only be modified by HCC.**

File	Description
<code>dhcp.c</code>	DHCP client source code.
<code>dhcp.h</code>	Header file.

2.3 Version File

The file `src/version/ver_ip_app_dhcp.h` contains the version number of this module. This version number is checked by all modules that use this module to ensure system consistency over upgrades.

3 Configuration Options

Set the system configuration options in the file `src/config/config_ip_app_dhcp.h`. This section lists the available options and their default values.

DHCP_TASK_STACK_SIZE

The DHCP client task configuration. The default value is 1024.

DHCP_TIMER_PERIOD

The timer period in milliseconds. The default value is 100.

DHCP_MSG_EXPIRY

The DHCP message expiry time in milliseconds. The default value is 10000.

DHCP_LEASE_TIME

The requested lease time in seconds. The default value is 3600.

DHCP_FQDN_ASCII_ENC

Set this to 1 for ASCII encoding of the domain name used for FQDNs in the DHCP request phase. The default value is 0.

DHCP_CLI_ID_HW_ADDR

Keep this at the default of 1 to use the hardware address for the client identifier. To use FQDNs, set it to 0.

4 Integration

This section describes all aspects of the DHCP module that require integration with your target project. This includes porting and configuration of external resources.

4.1 OS Abstraction Layer

All HCC modules use the OS Abstraction Layer (OAL) that allows the module to run seamlessly with a wide variety of RTOSes, or without an RTOS.

This module uses the following OAL components:

OAL Resource	Number Required
Tasks	1
Mutexes	2
Events	1

The DHCP task is started automatically by the IP stack if DHCP is enabled (that is, if the `IP_DHCP_ENABLE` configuration option in the IPv4 base package is set).

The DHCP task function is named `dhcp_task()`.

4.2 Utilities

The DHCP code creates and uses a single timer in the `hcc_timer` module.

The `hcc_timer` module is included in your system when you install the base TCP/IP modules.

4.3 PSP Porting

The Platform Support Package (PSP) is designed to hold all platform-specific functionality, either because it relies on specific features of a target system, or because this provides the most efficient or flexible solution for the developer. For full details of its functions and macros, see the *HCC Base Platform Support Package User Guide*.

The module makes use of the following standard PSP functions:

Function	Package	Element	Description
psp_memcmp()	psp_base	psp_string	Compares two blocks of memory.
psp_memcpy()	psp_base	psp_string	Copies a block of memory. The result is a binary copy of the data.
psp_memset()	psp_base	psp_string	Sets the specified area of memory to the defined value.

The module makes use of the following standard PSP macros:

Macro	Package	Element	Description
PSP_RD_BE32	psp_base	psp_endianness	Reads a 32 bit value stored as big-endian from a memory location.
PSP_WR_BE32	psp_base	psp_endianness	Writes a 32 bit value to be stored as big-endian to a memory location.